


# PROVANCE D60S3

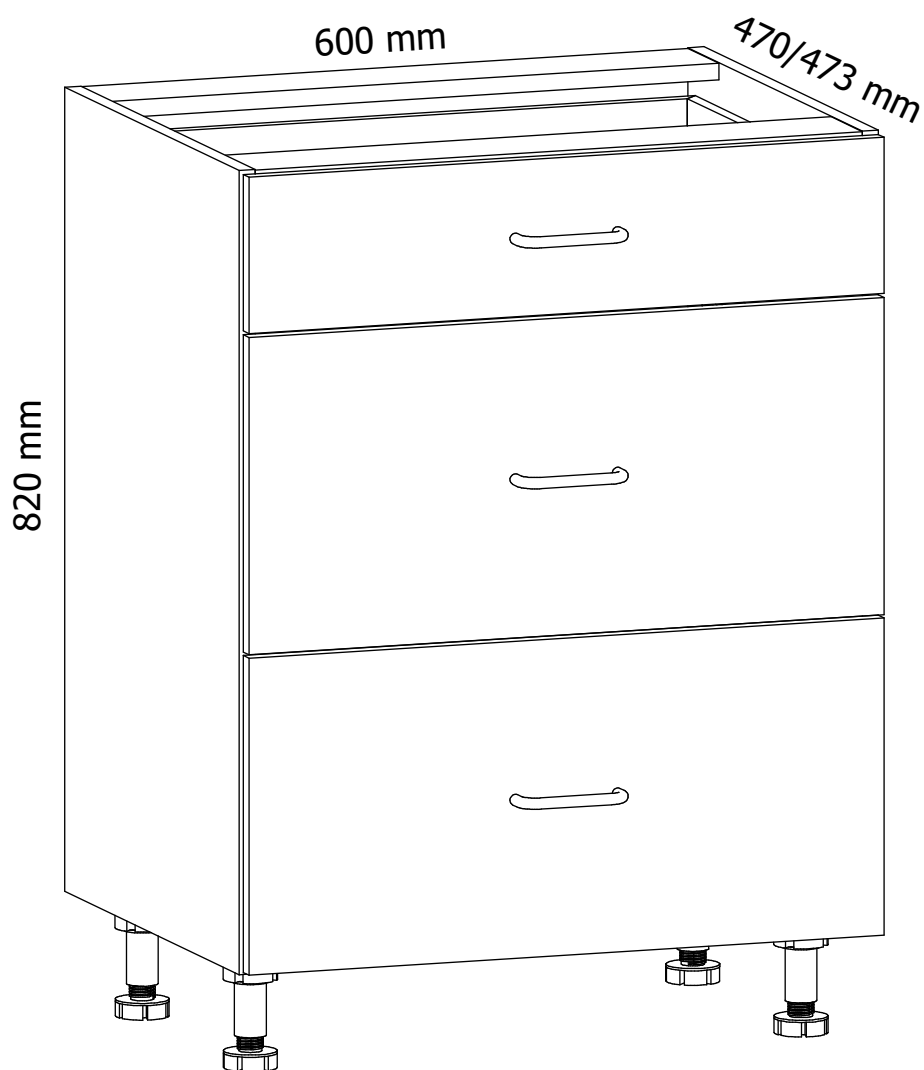

**PL:** INSTRUKCJA MONTAŻU

**EN:** ASSEMBLY MANUAL




**CZ:** PŘÍRUČKA PRO MONTÁŽ


**SK:** PRÍRUČKA PRE MONTÁŽ















**DE:** MONTAGEANLEITUNG

**SR:** UPUTSTVO ZA INSTALACIJU

**NL:** MONTAGE-INSTRUCTIES

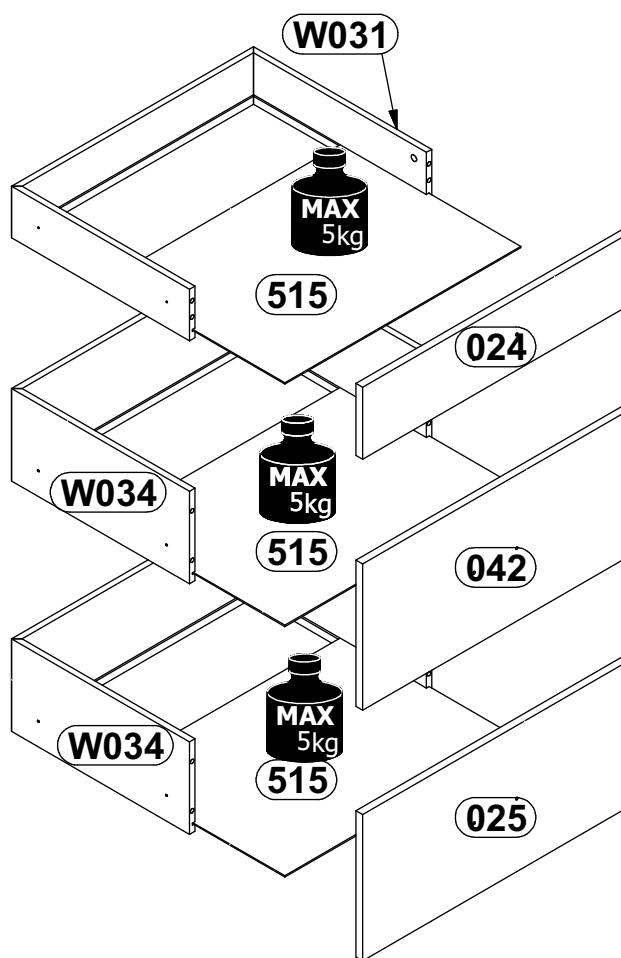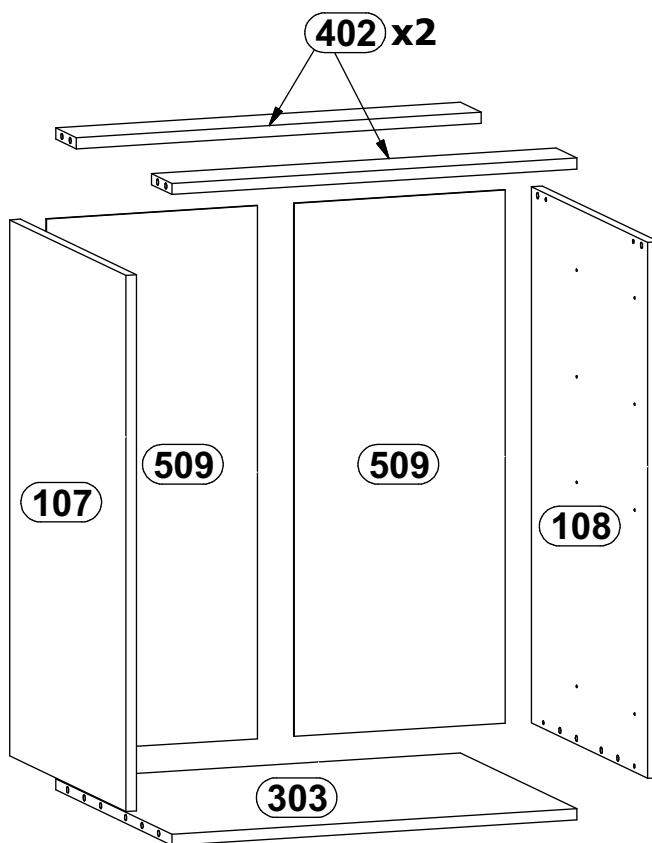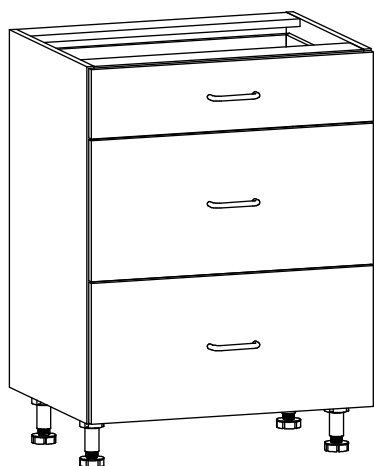


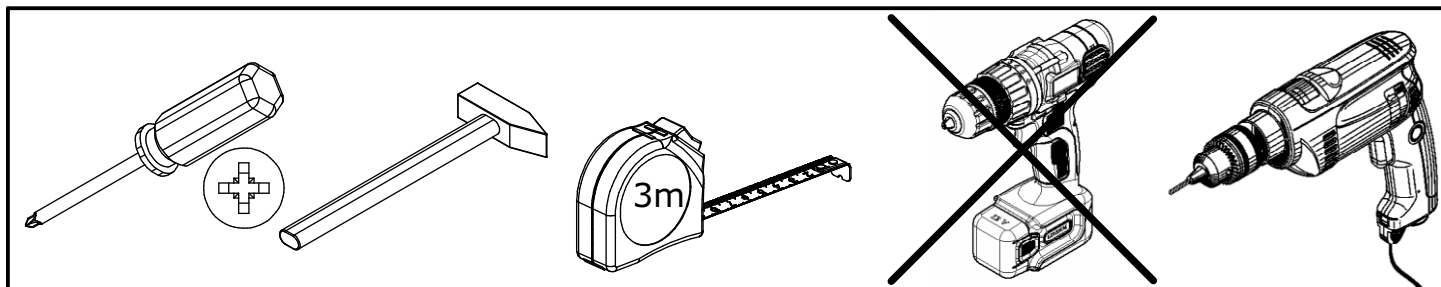
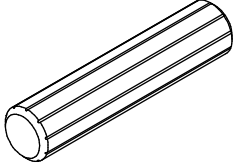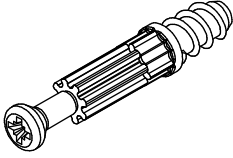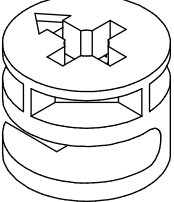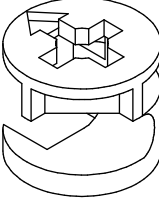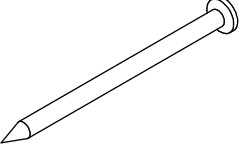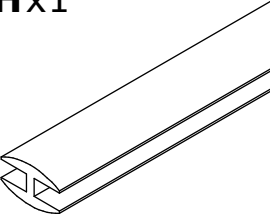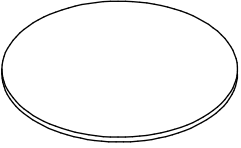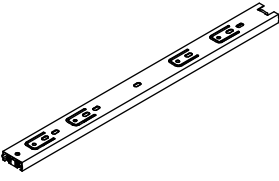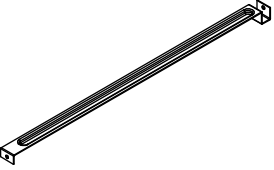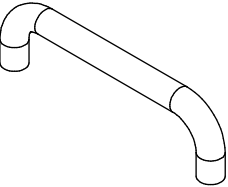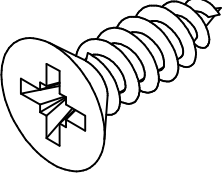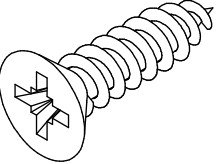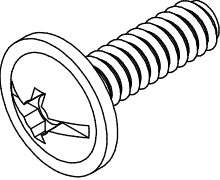
<b>A1 x18</b>  $\varnothing 8 \times 35 \text{mm}$	<b>B1 x14</b>  $\varnothing 5 \times 38 \text{mm}$	<b>C1 x8</b>  $\varnothing 15 \times 12 \text{mm}$	<b>C2 x6</b>  $\varnothing 12 \times 10 \text{mm}$	<b>G1 x26</b>  26mm
<b>H x1</b>  715mm	<b>J x 6</b>  $\varnothing 21 \text{mm}$	<b>L1 x4</b>  $\varnothing 50 \times 95 \text{mm}$	<b>Pc x6</b>  400mm	<b>S3 x3</b>  400mm
<b>U x3</b> 	<b>W1 x24</b>  $\varnothing 3,5 \times 13 \text{mm}$	<b>W2 x28</b>  $\varnothing 3,5 \times 16 \text{mm}$	<b>X x6</b> 	


# 1

B1 x 8




Ø5x38mm

Pc x 6




400mm

W2 x 12




Ø3,5x16mm






I

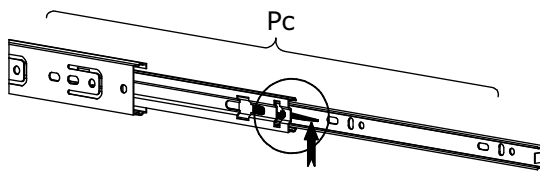

II

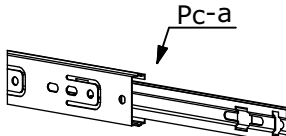


Pc-b

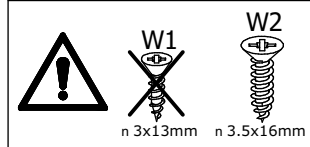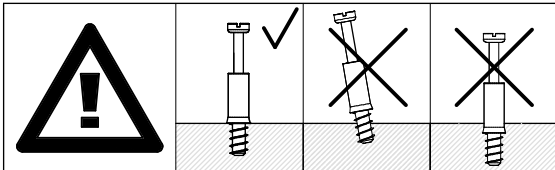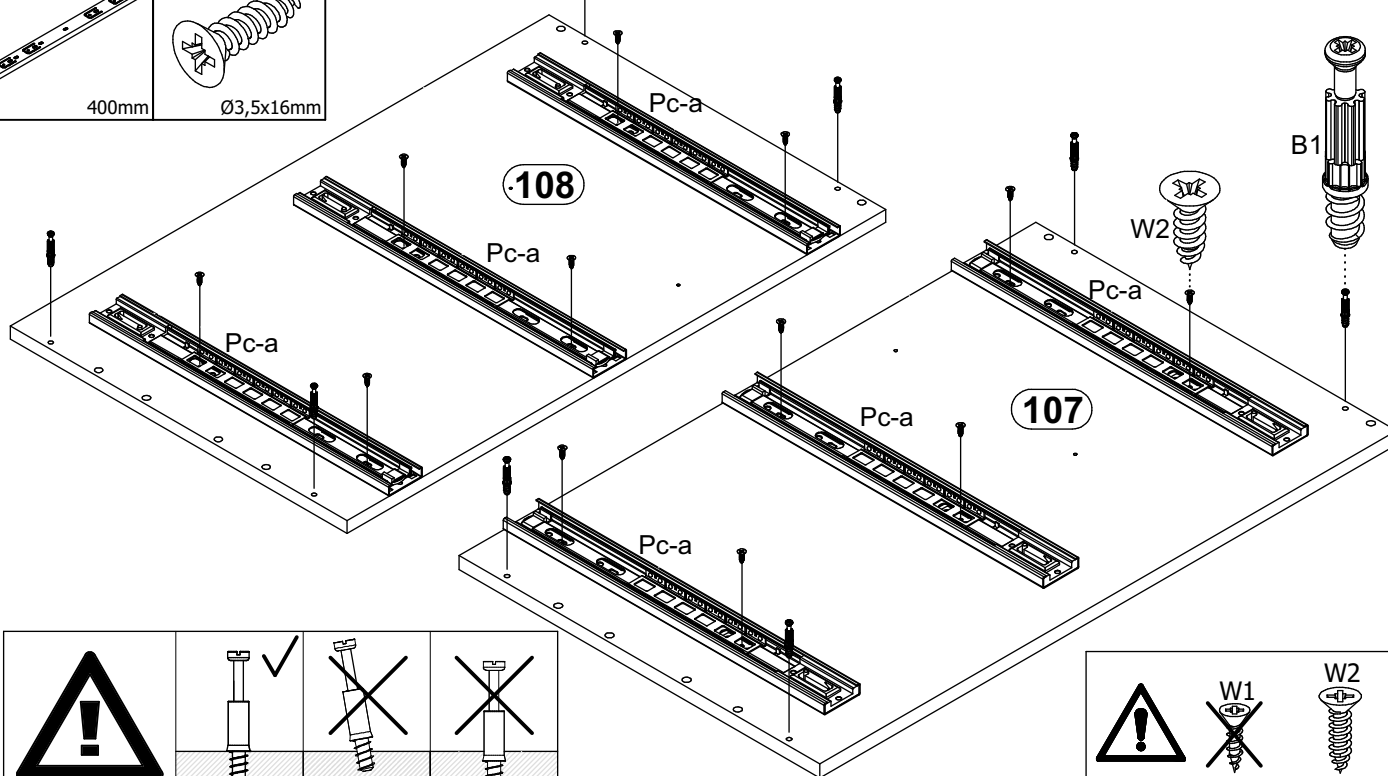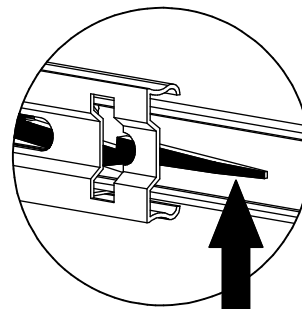


# 2

A1 x 12







Ø8x35mm

C1 x 8




Ø15x12mm

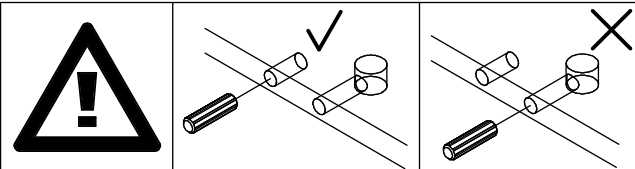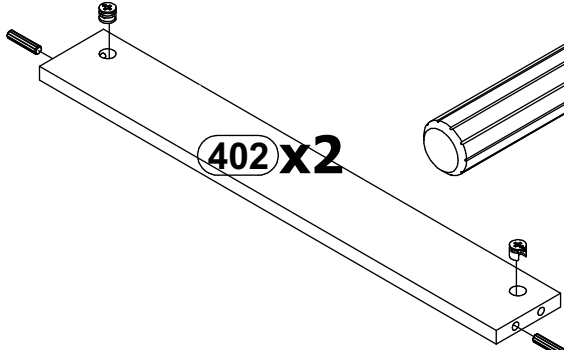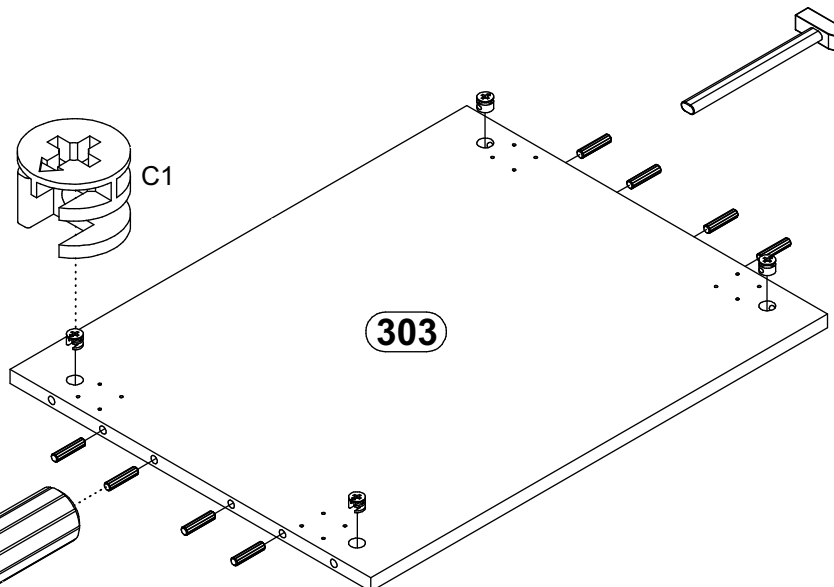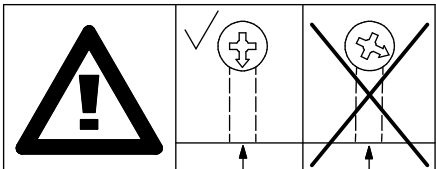


3

L1 x4




Ø50x95mm

W2 x16






Ø3,5x16mm






n 3x13mm



n 3.5x16mm

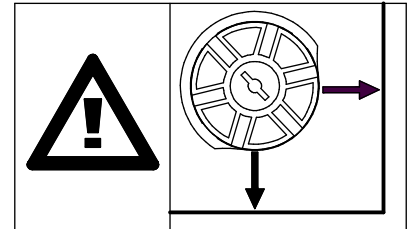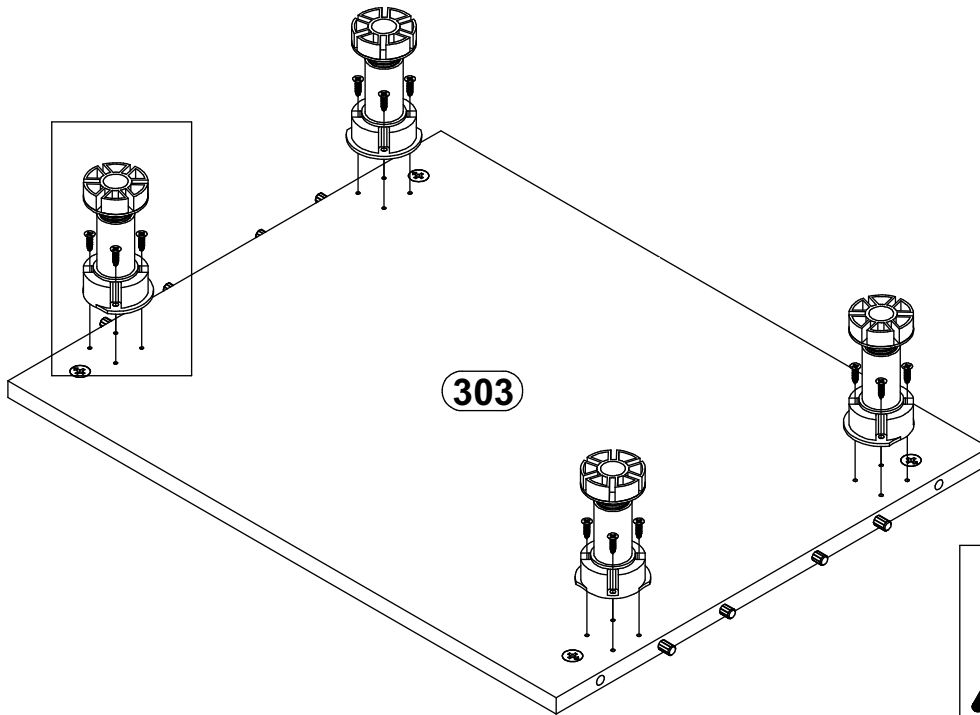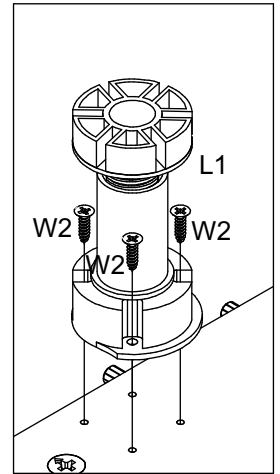


4

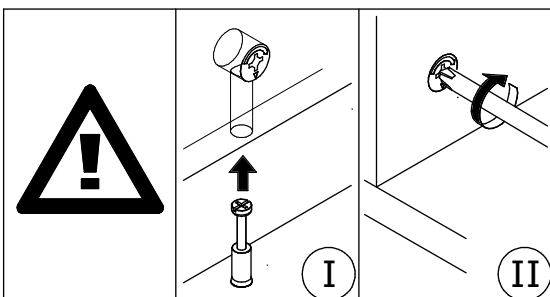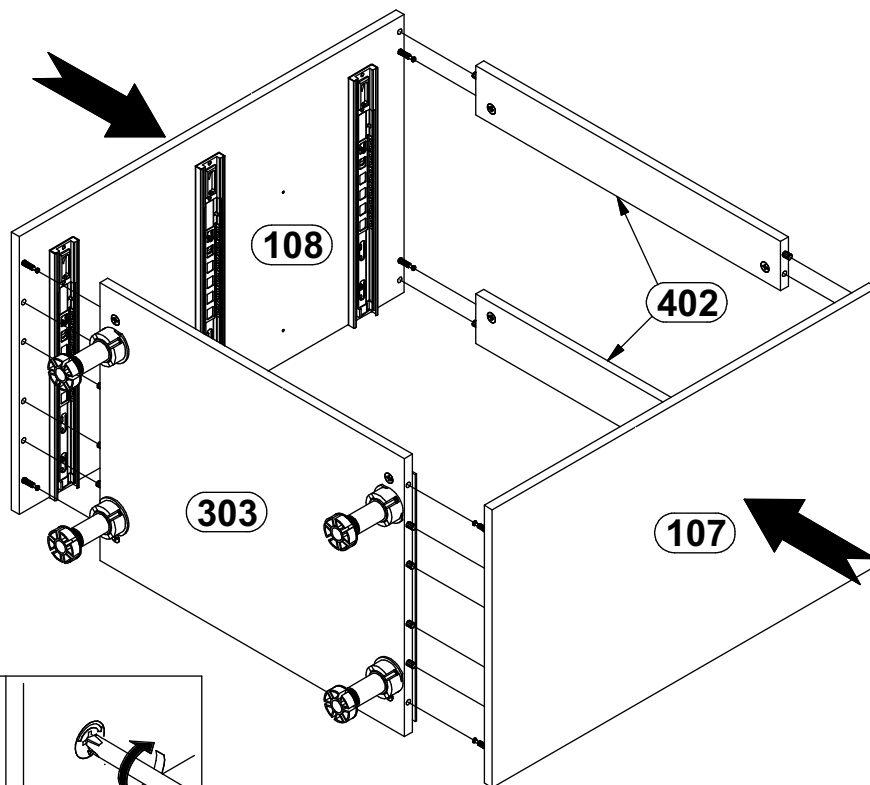


**5**

**G1x26**







26mm

**Hx1**

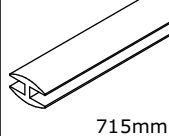


715mm

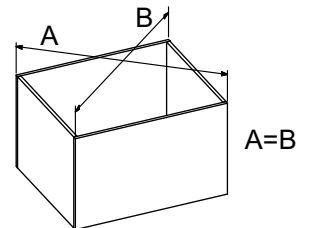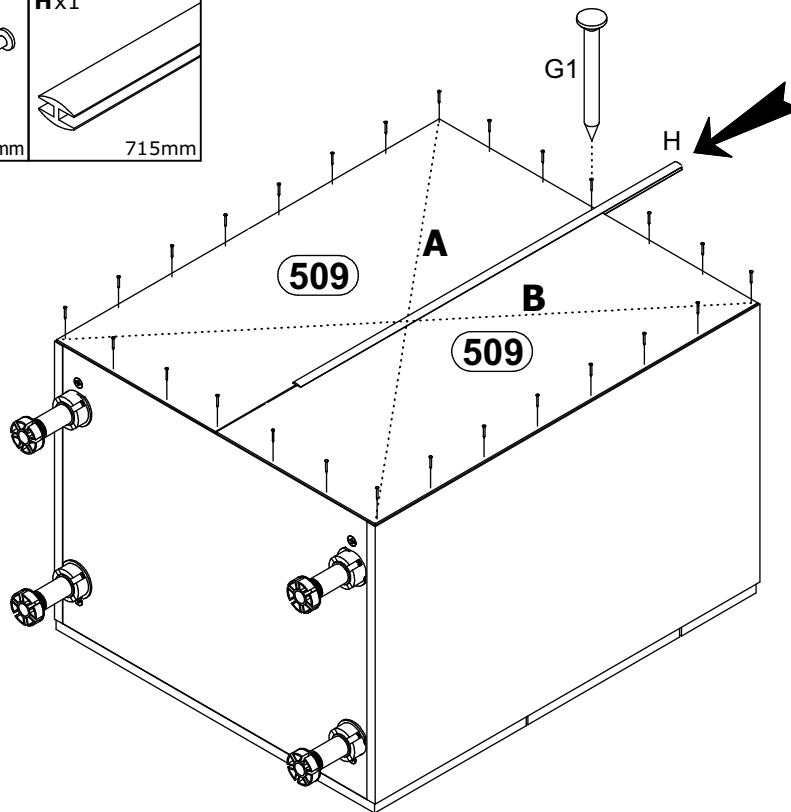


**6**

**A1x6**




Ø8x35mm

**B1x6**




Ø5x38mm

**Pc-bx6**






400mm

**W1x12**




Ø3,5x13mm

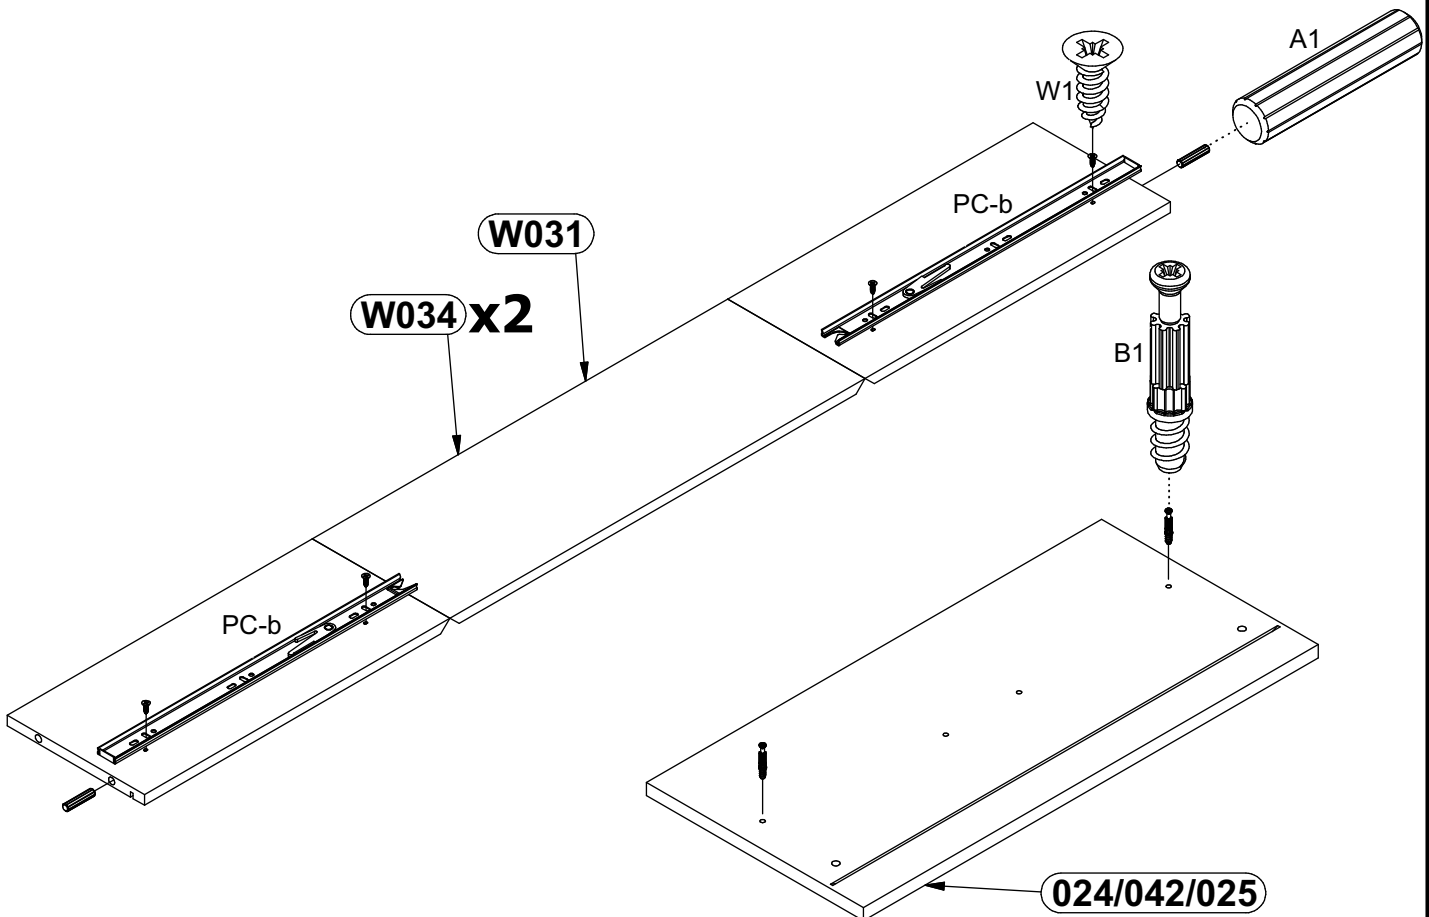





**024/042/025**

7

C2 x 6

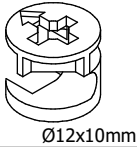


Ø12x10mm

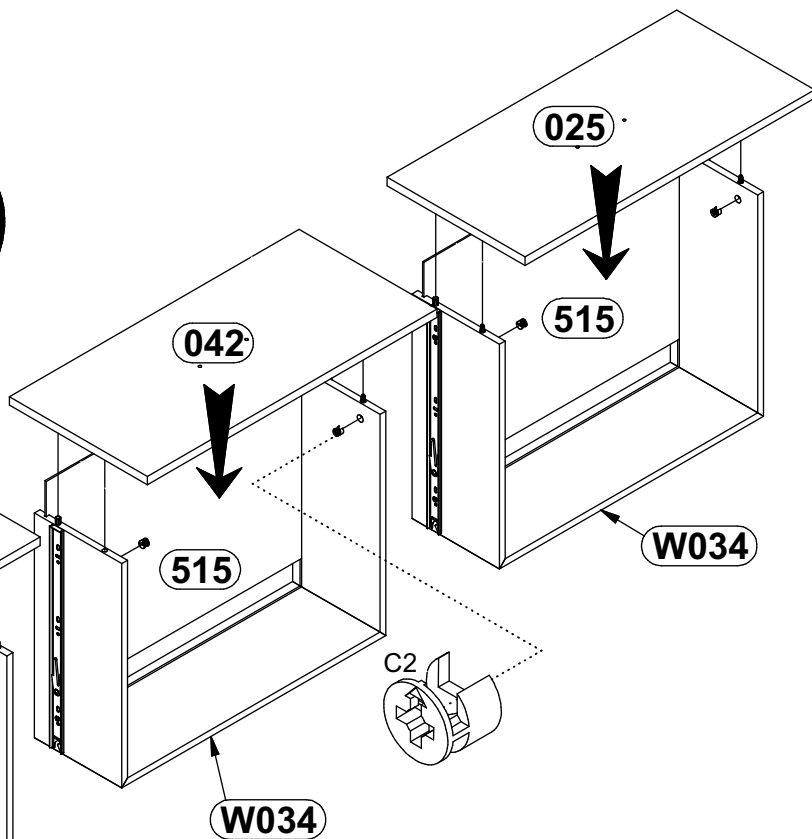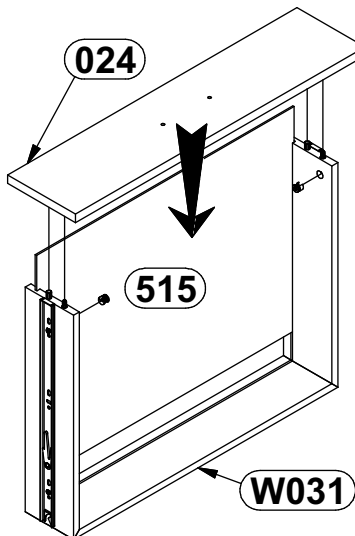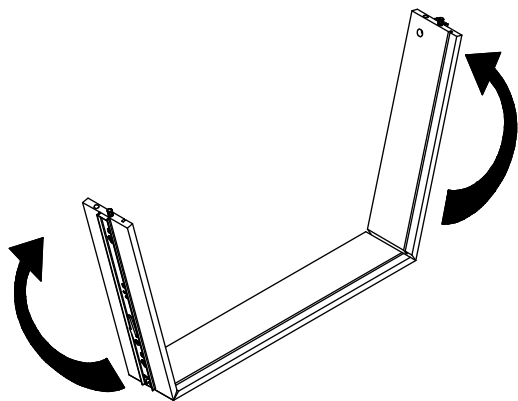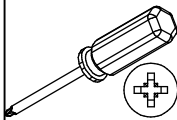


8

J x 6

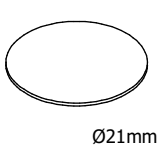


Ø21mm

S3 x 3

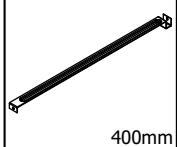

400mm

U x 3




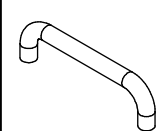


W1 x 6




Ø3,5x13mm

X x 6

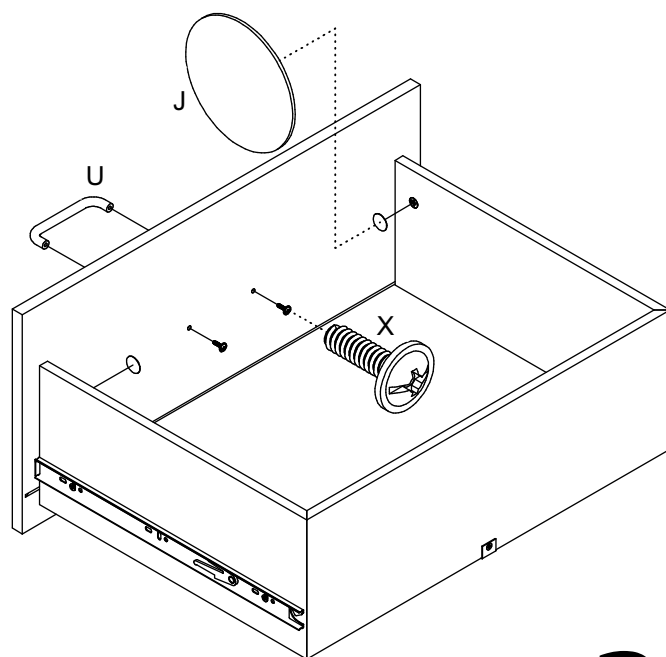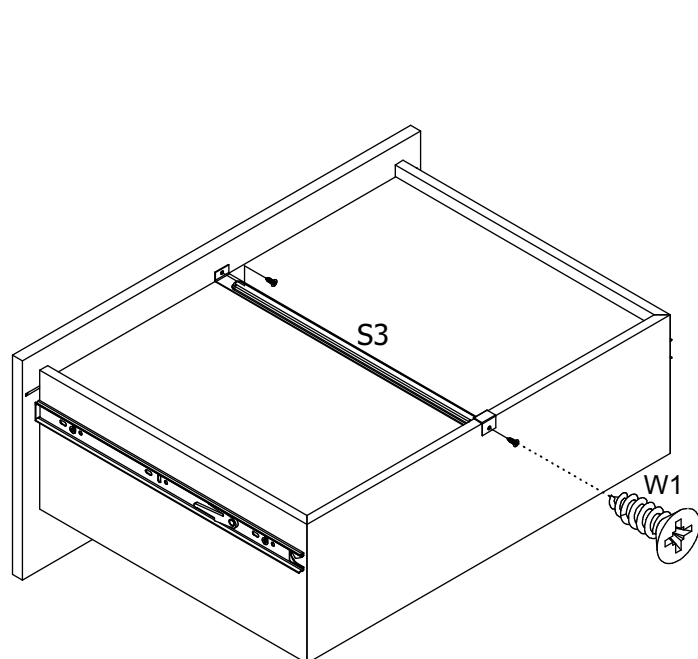


x3



9

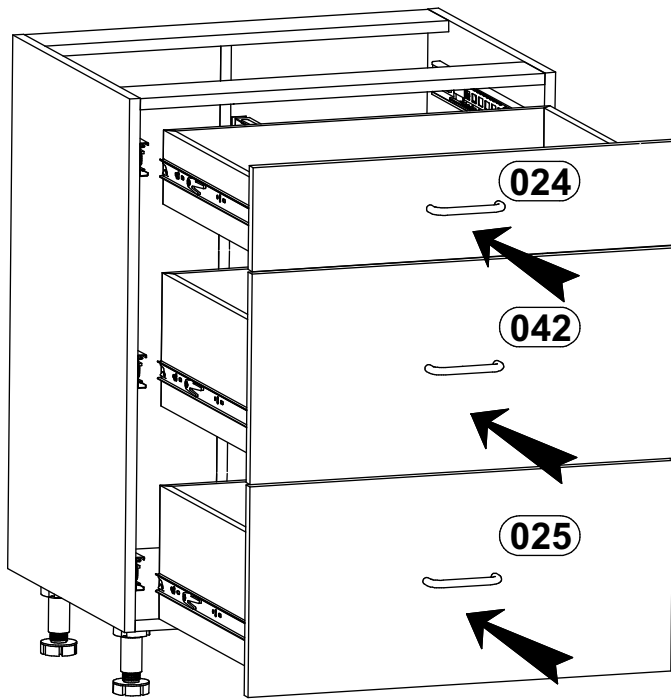

I

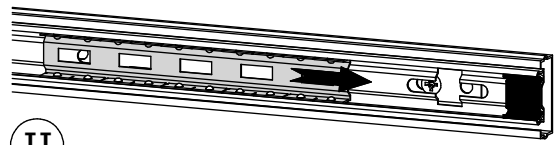


II

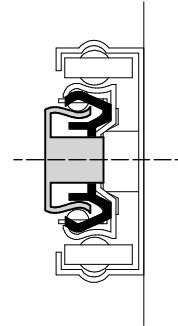
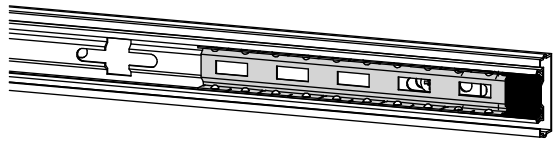


10

W1 x 6




Ø3,5x13mm

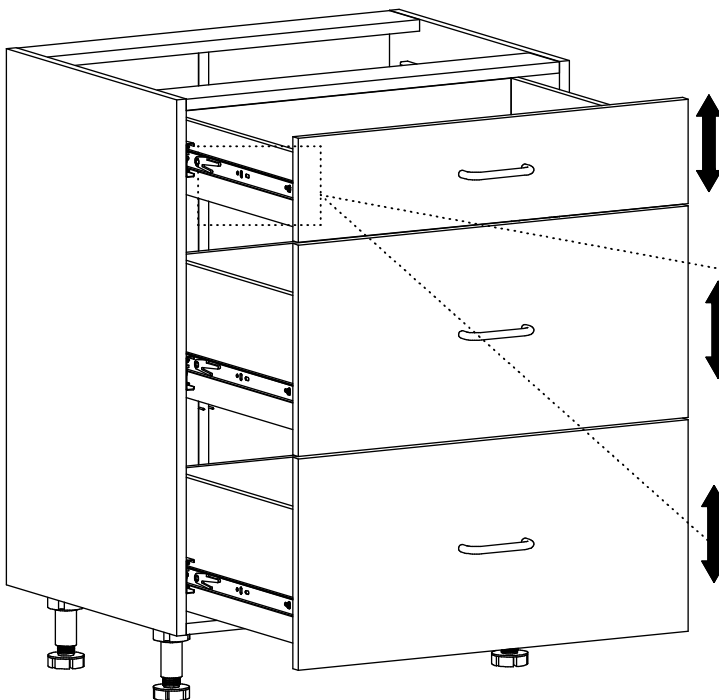







I




II

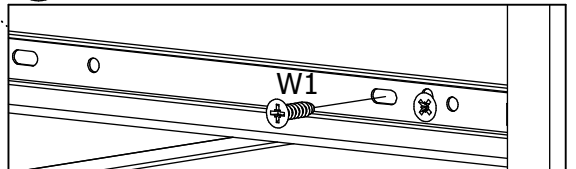



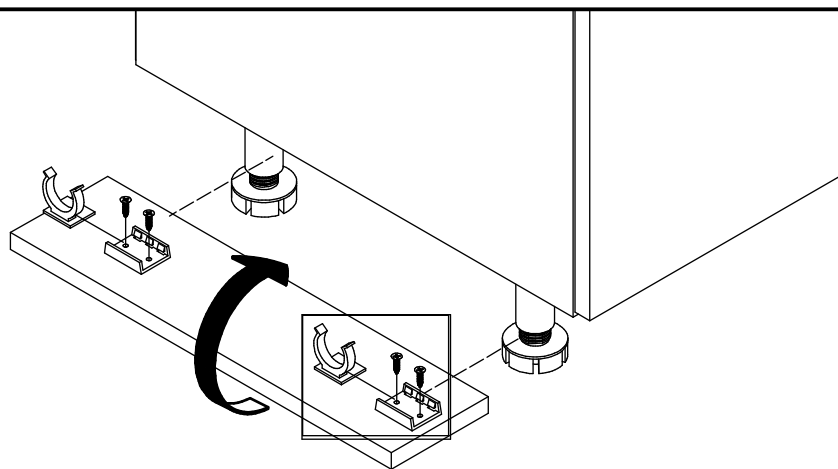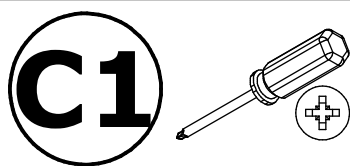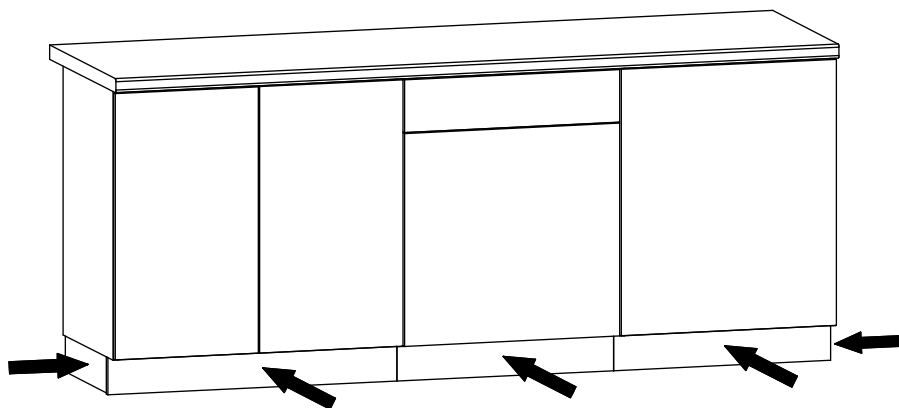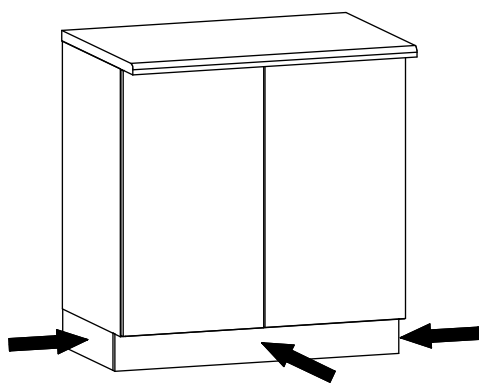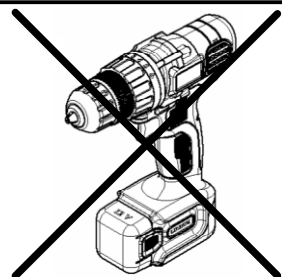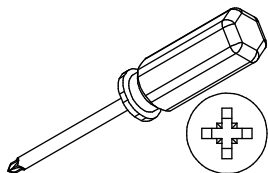


**L6-a** x4

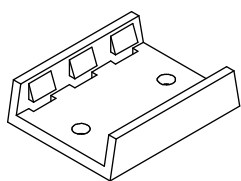


38x30x10mm

**L6-b** x4

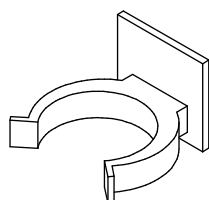


35x32x25mm

**W2** x8

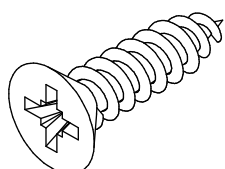


Ø3,5x16mm

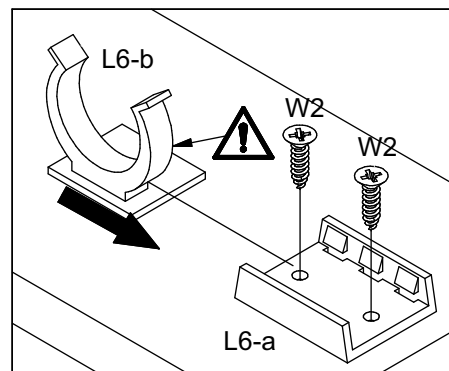


**C2**

**L6-a**×2

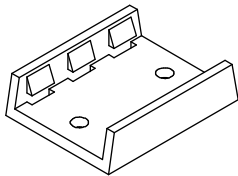


38x30x10mm

**L6-b**×2

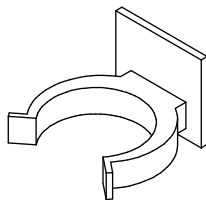

35x32x25mm

**W2**×4

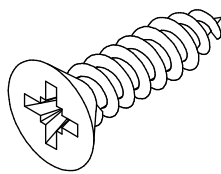

Ø3,5x16mm

