

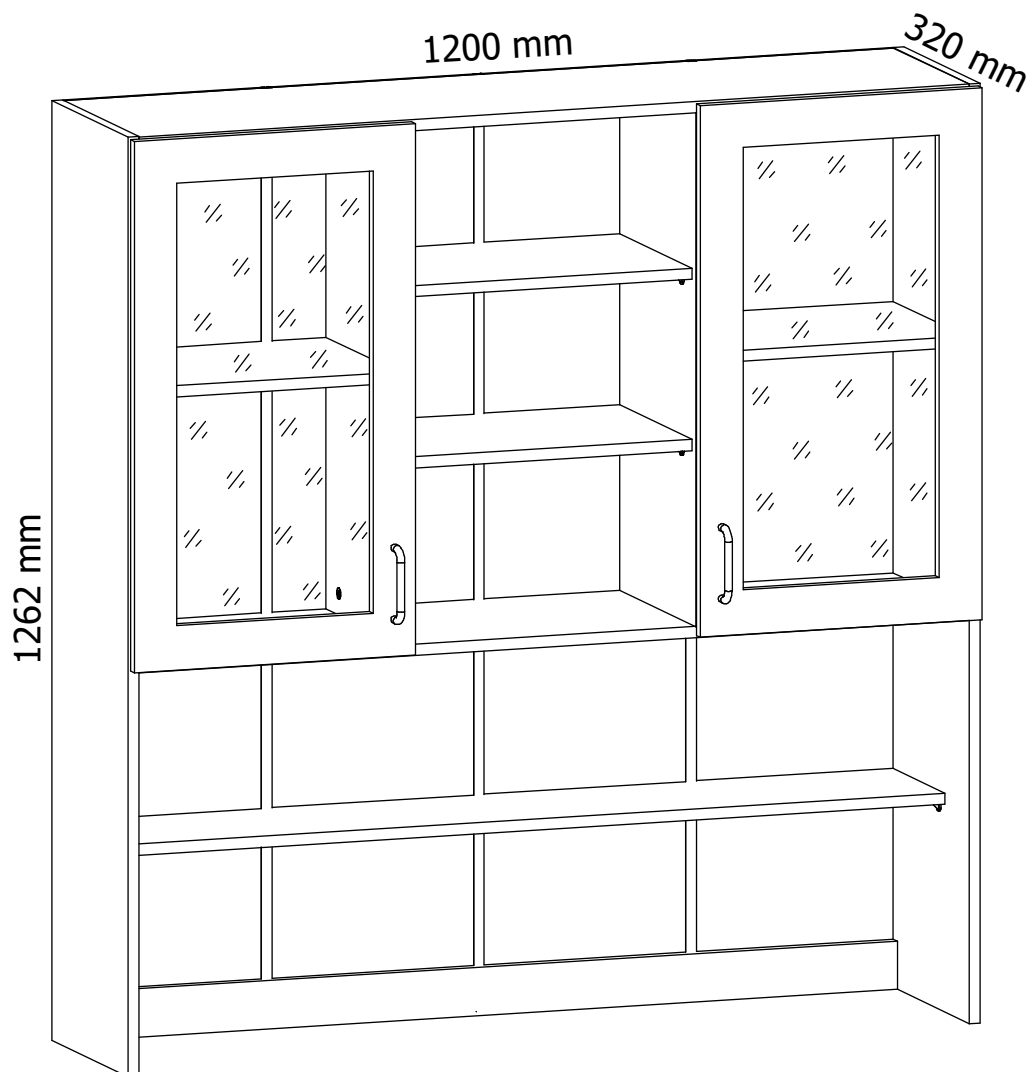











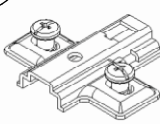
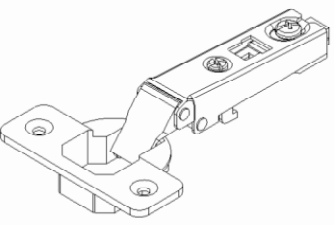
# PROVANCE K120

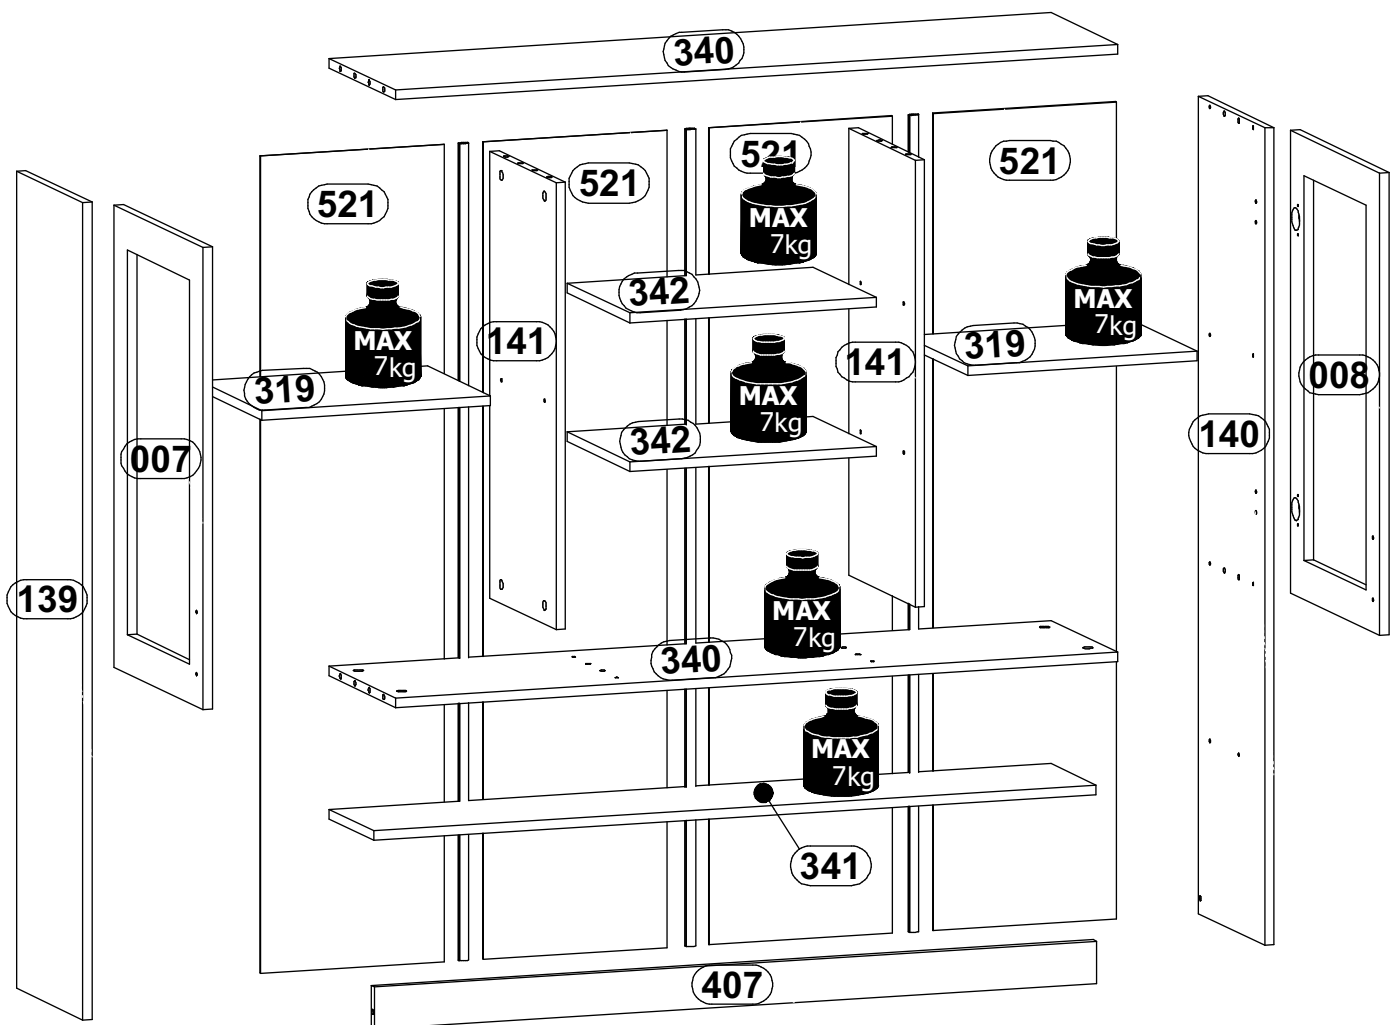

PL: INSTRUKCJA MONTAŻU  
EN: ASSEMBLY MANUAL  
CZ: PŘÍRUČKA PRO MONTÁŽ  
SK: PRÍRUČKA PRE MONTÁŽ  
DE: MONTAGEANLEITUNG  
SR: UPUTSTVO ZA INSTALACIJU


# K120

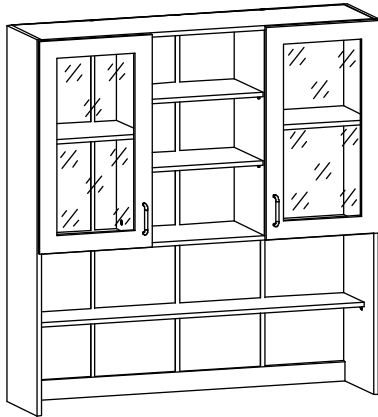

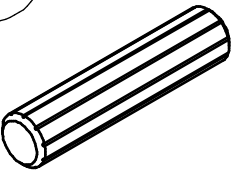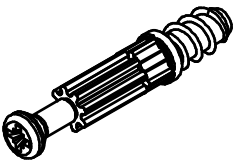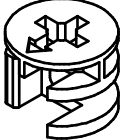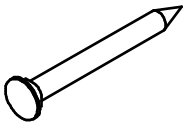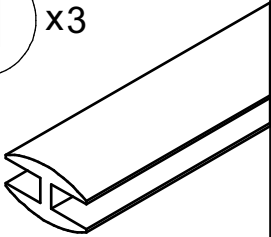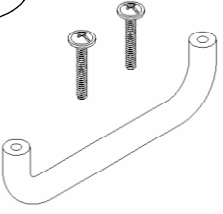
<p><b>A</b> x18</p>  <p>Ø8x35mm</p>	<p><b>B</b> x16</p> 	<p><b>C</b> x16</p>  <p>Ø15x12mm</p>	<p><b>E</b> x20</p> 
<p><b>G</b> x50</p> 	<p><b>H</b> x3</p>  <p>715 mm</p>	<p><b>M</b> x2</p> 	<p><b>W2</b> x8</p>  <p>Ø3,5x16</p>
<p><b>Y</b> x16</p>  <p>Ø18 mm</p>	<p><b>Zc</b> x4</p> <div>  <p>Zc-1</p>  <p>Zc-2</p> </div>		




# 1

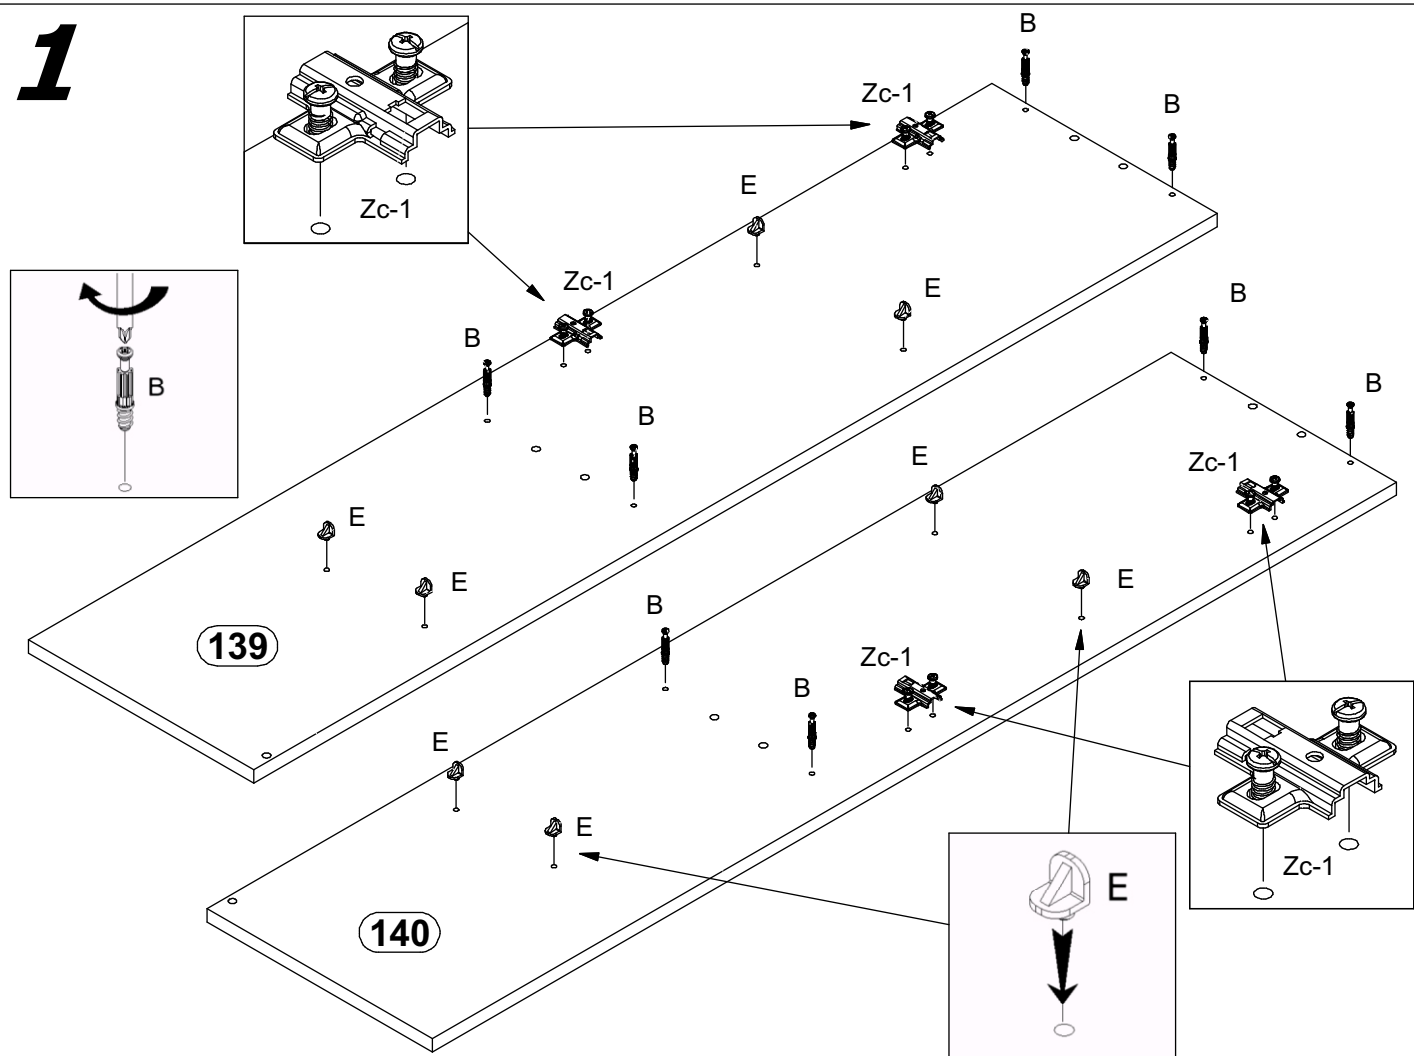


# 2

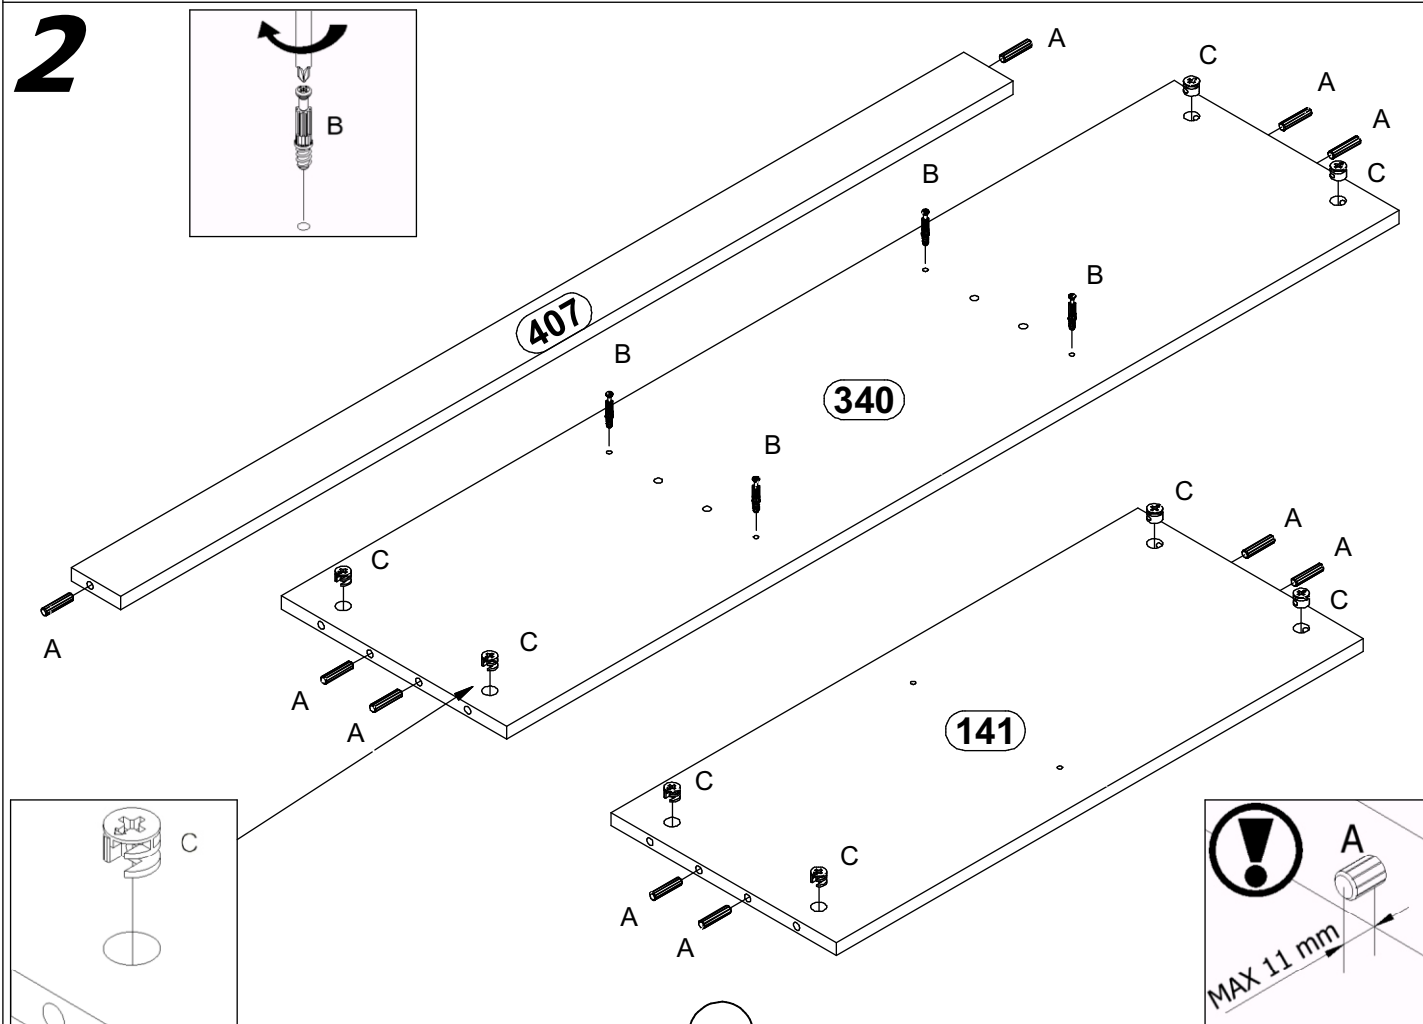


# 3

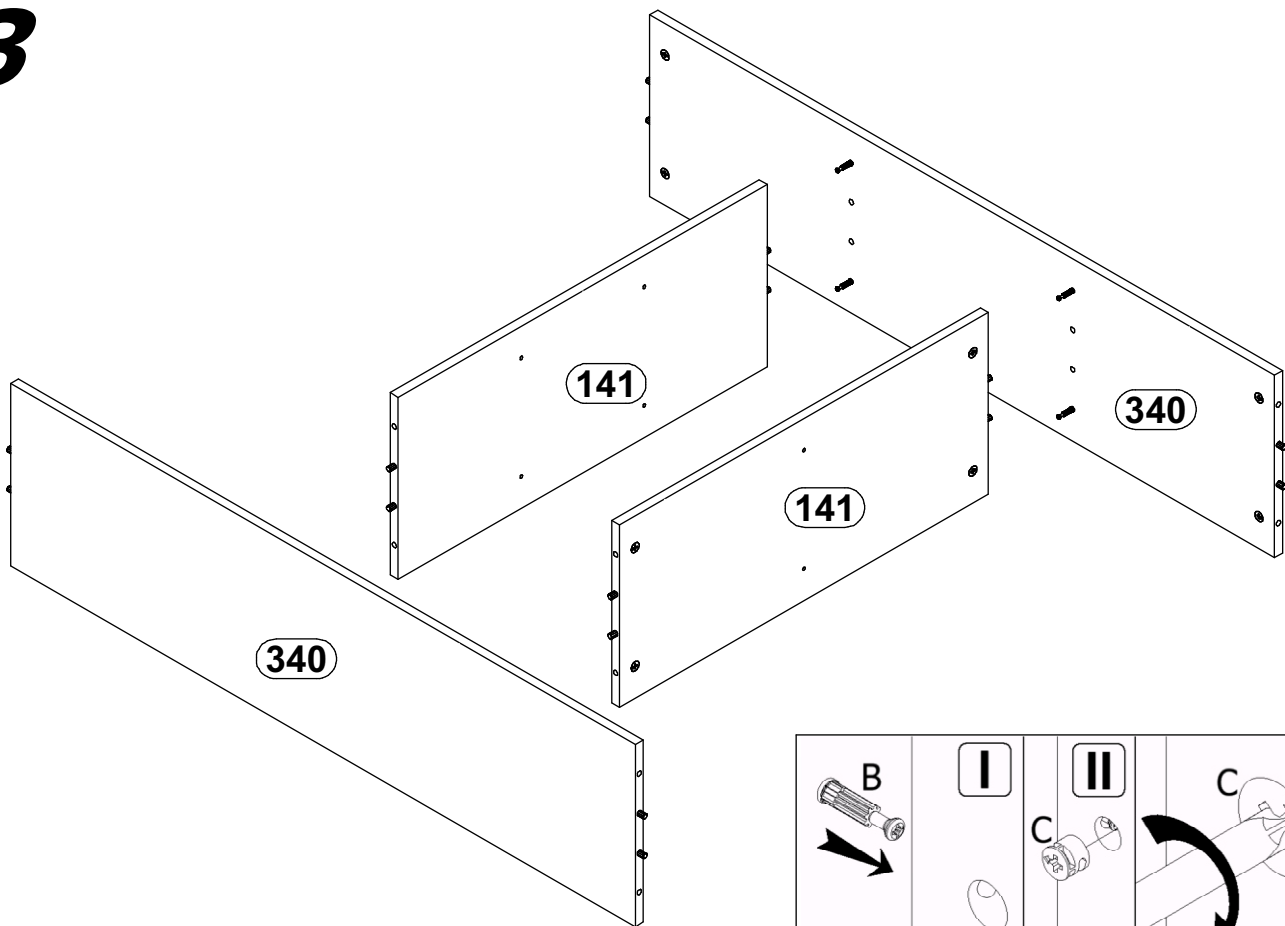



# 4

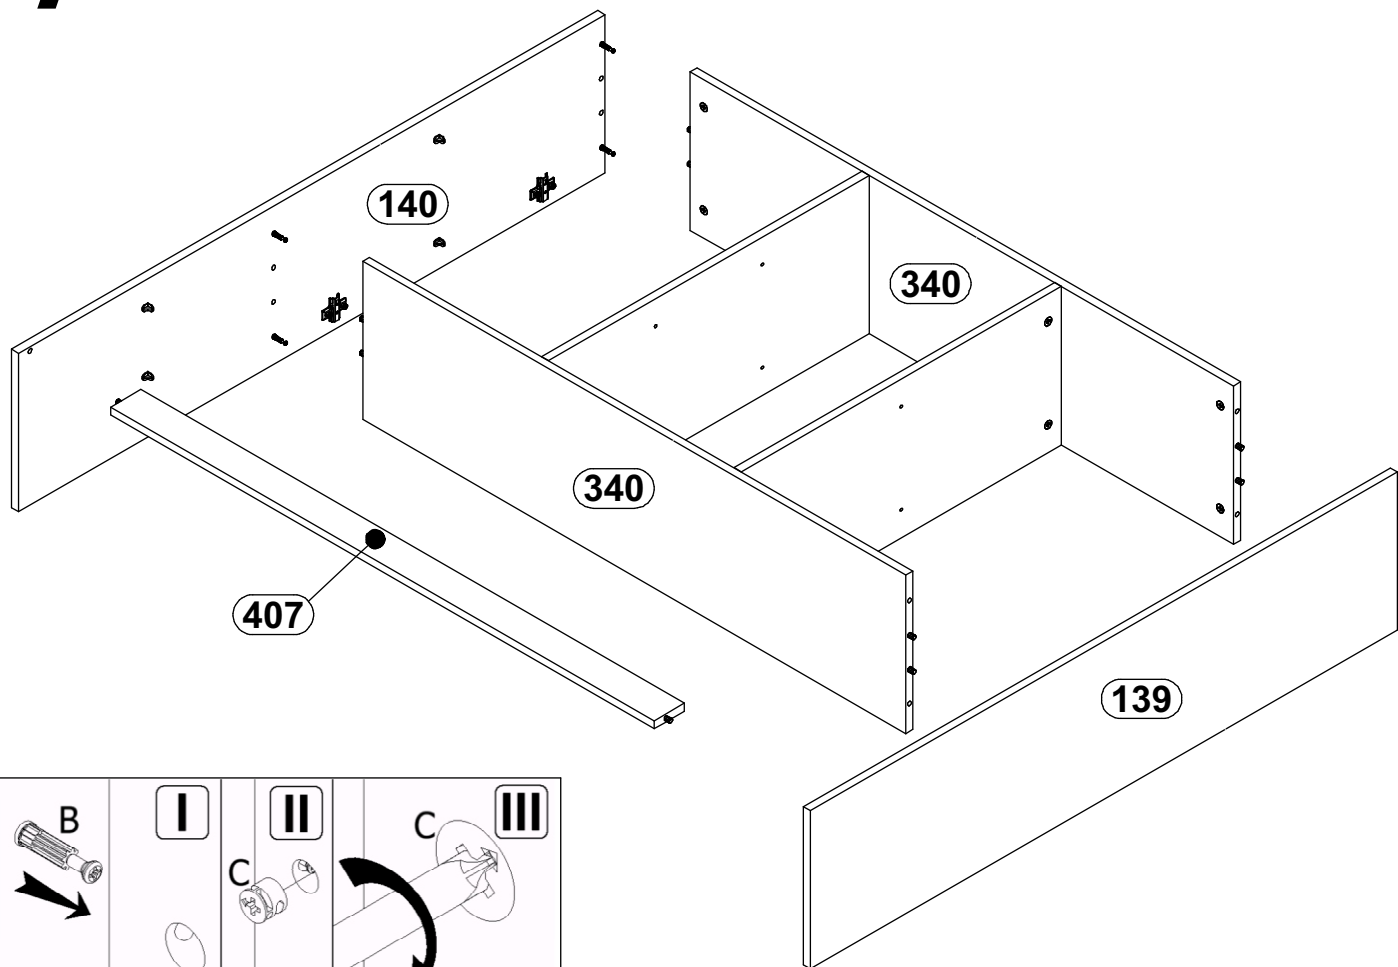


# 5

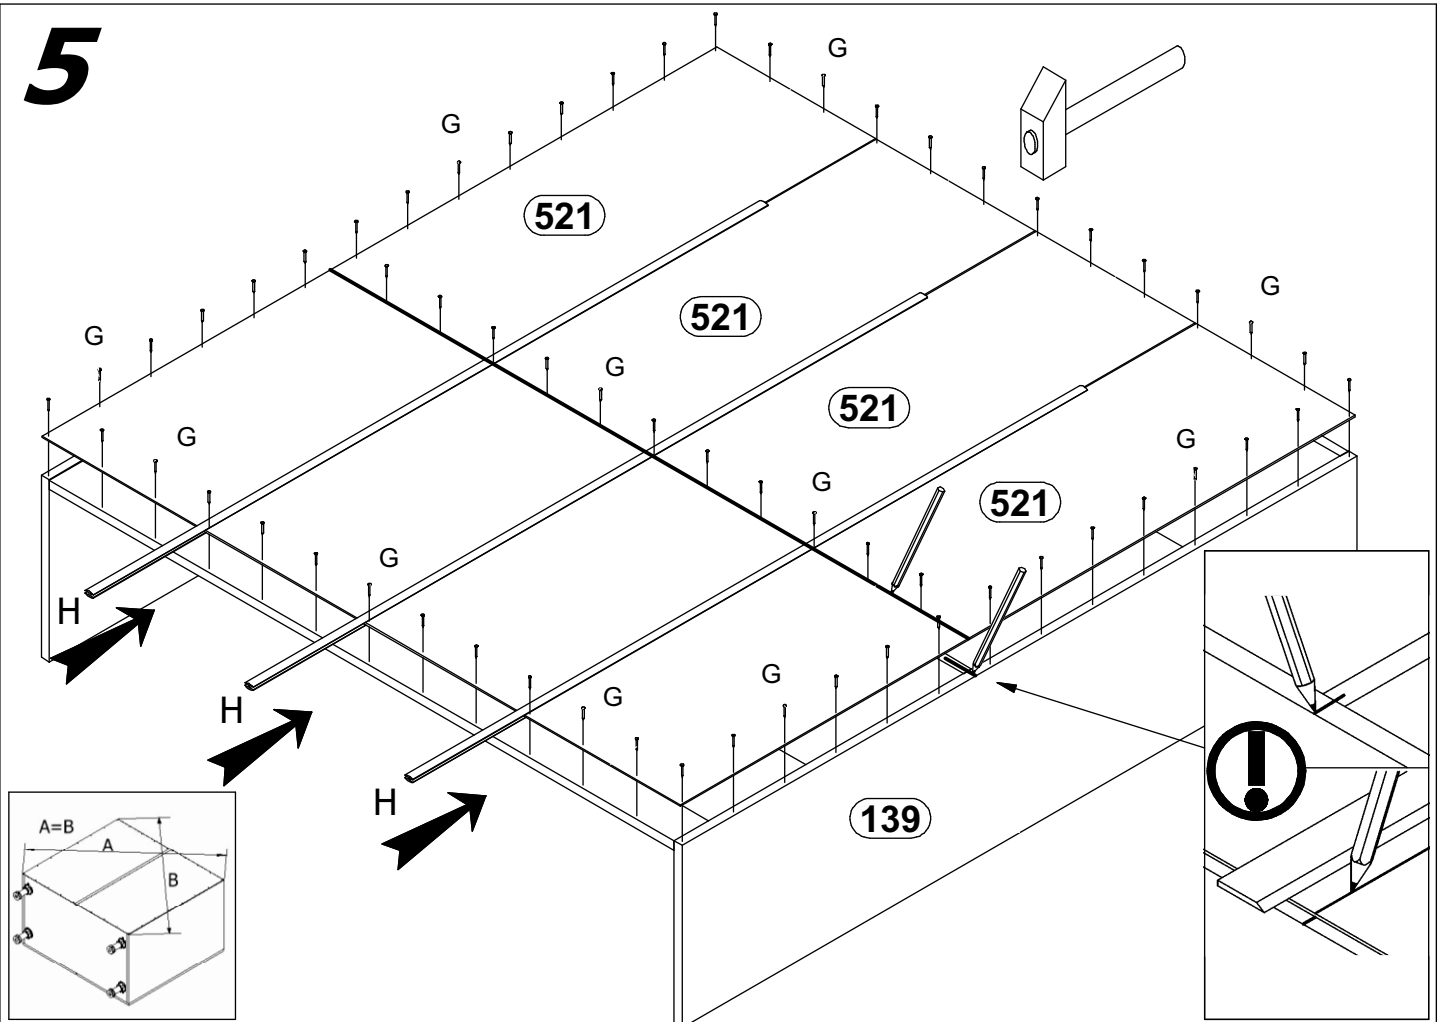

# 6

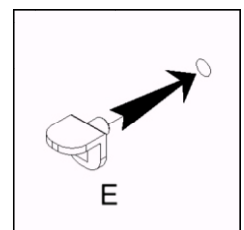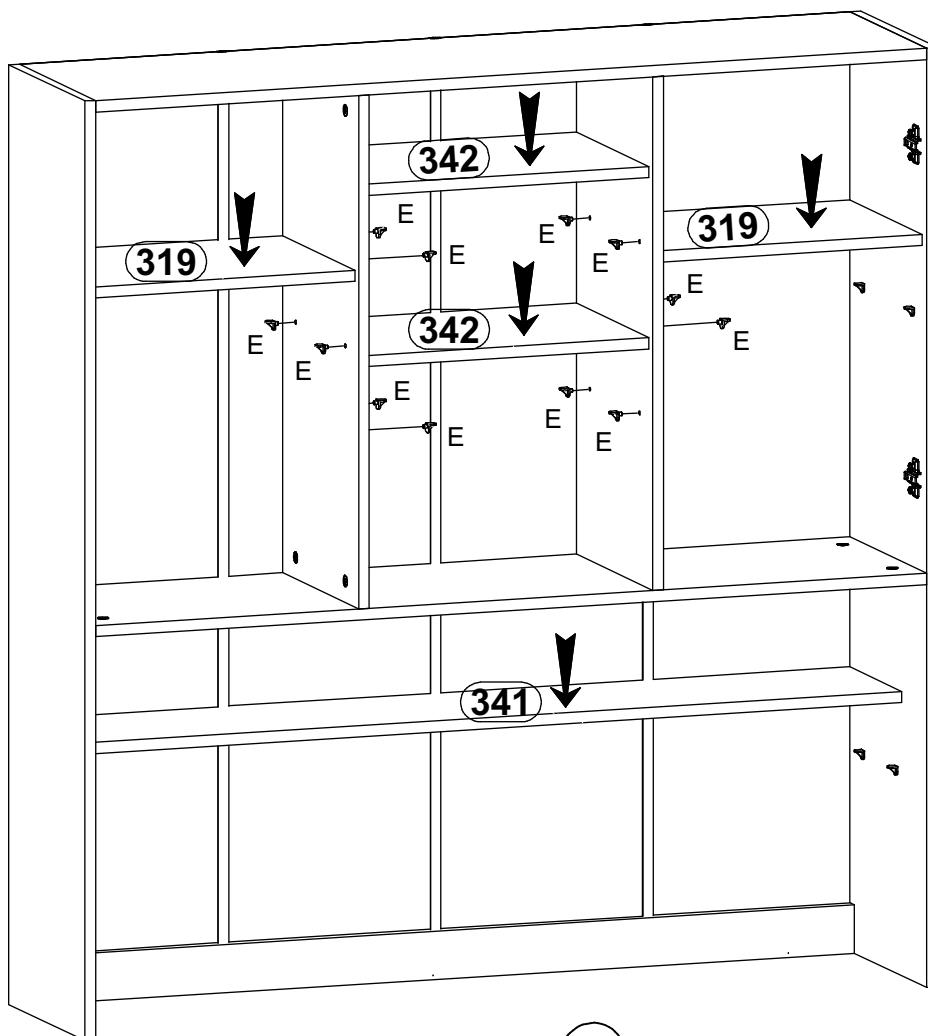

# 8

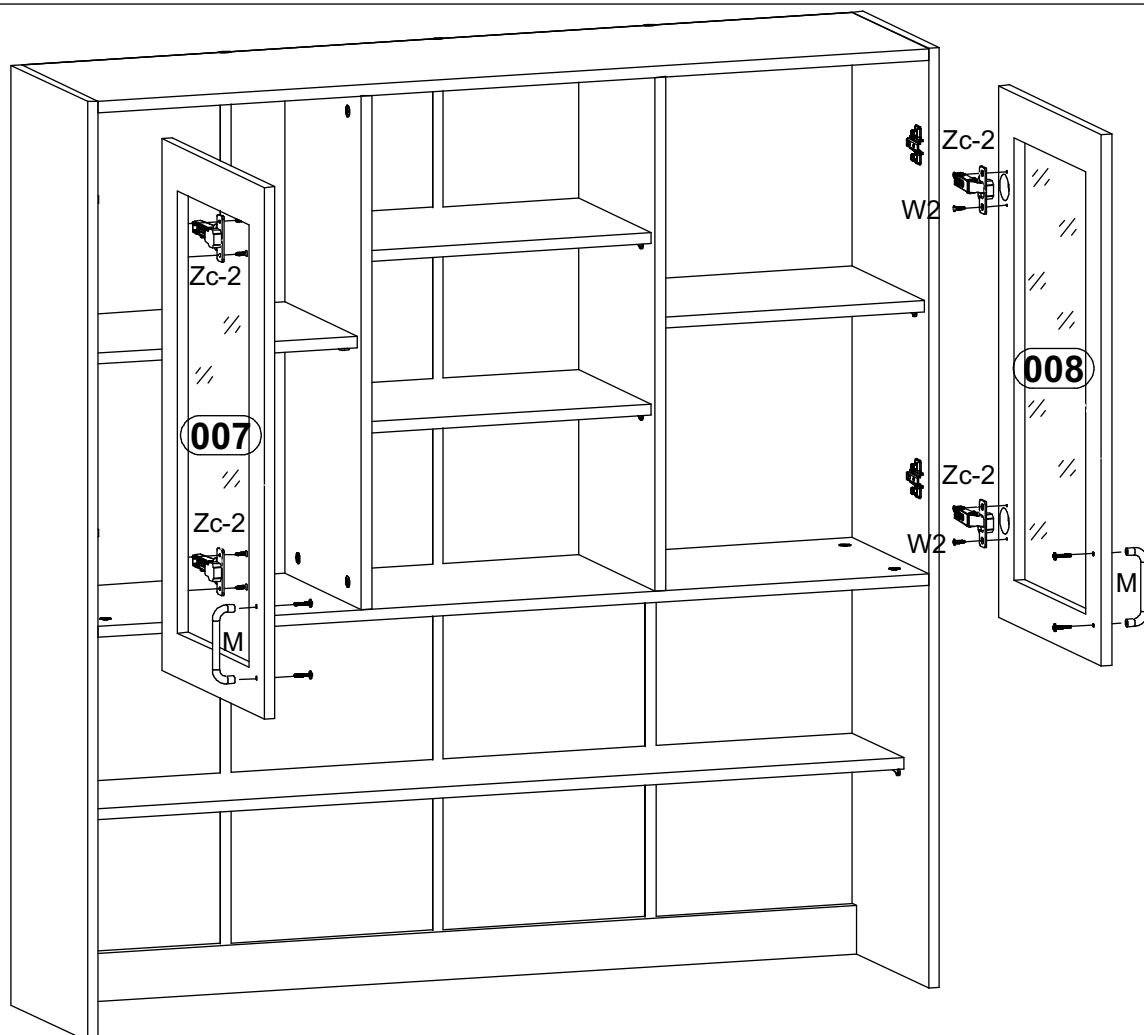

# 9

